

## Fieldpack Selection Guide

MODEL	DESCRIPTION	DL3K14	HS33K14	HS36K19	HS36K35	HS36K40
<b>Meters</b>						
<b>EHDL1</b>	Electronic handle	•		•	•	•
<b>DL3 *</b>	Data logger	•		•		
<b>HG2</b>	HVAC Guide® System Analyzer					•
<b>HS33</b>	Manual ranging stick		•			
<b>HS36</b>	Auto ranging stick/true rms, b/l		•	•	•	
<b>SMG5</b>	Megger (includes leads/case)			•	•	
<b>Leads/Accessories</b>						
<b>ADA2</b>	Dual alligator clips		•	•	•	•
<b>ASA2</b>	Small alligators (pr)	•	•	•	•	•
<b>AHDL1</b>	Adapter handle	•				
<b>AQK3</b>	Flame diode kit AQC2+AQP1	•	•	•	•	•
<b>ADLS2</b>	Silicone Deluxe	•	•	•	•	•
<b>Velcro Strip</b>	Attaches ATB1 to pipe	•	•	•	•	•
<b>Cases</b>						
<b>ANC3</b>	Briefcase	•		•	•	•
<b>ANC8</b>	Mid-sized case		•			
<b>Thermocouples</b>						
<b>ATA1</b>	Alligator clip	•		•	•	•
<b>ATWB1</b>	Wet bulb	•		•	•	•
<b>ATC1</b>	Small pipe clamp		•	•	•	•
<b>ATB1</b>	Bead tip	•	•	•	•	•
<b>Heads</b>						
<b>AAV3</b>	Air velocity, temp	•			•	•
<b>ACH4</b>	Amp clamp	•	•	•	•	•
<b>ACM3</b>	Carbon monoxide	G	G	G	G	•
<b>ADMN2</b>	Dual-port manometer					•
<b>AMN2</b>	Manometer	G	G	G	G	
<b>AOX2 *</b>	%CO, %O2, temp					•
<b>ARH4</b>	%RH, WB, dew pt., air temp	•	•	•	•	•
<b>ASX14</b>	Superheat/subcooling for A/C	•			•	•
<b>ATH4</b>	Dual temp	•				•
<b>ATIR3</b>	Infrared temperature				•	•
<b>AUA2</b>	Micro/milliamps w/ AQK3	•	•			
<b>AVG2</b>	Vacuum gauge	•		•	•	•
<b>AVH1</b>	Volts	•			•	
<b>Pocket Tools</b>						
<b>PLM2</b>	Mirror with LED light				•	•
<b>PMG2</b>	Lighted Magnet Tool				•	•

G - Add "G" suffix to model number to include ACM3 and AMN2

\* - Includes all accessories that normally come with meter minus carry case

## Accessory Heads

Connect Fieldpiece accessory heads to the "stick" meter, data logger, electronic handle, or other DMM to measure HVAC/R parameters.

The Fieldpiece HS series "stick" meters connect directly to accessory heads by sliding the head right onto the meter. Use the EHDL1 handle to convert any head to a stand alone meter.

Fieldpiece accessory heads can be used with most other DMMs. Your meter only needs mV (AC and DC) ranges and industry standard input jacks.

Use the Fieldpiece deluxe test leads (ADLS2) or the convenient AHDL1 adapter handle to connect the head to your meter.



ARH4 on HS35

AAV3 on EHDL1

ACM3 on DL3

## ARH4: Digital Psychrometer

Measures air temperature and RH%. Displays wet bulb for getting target superheat from manufacturers charts.

- Accuracy:  
±1°F 32°F-113°F.  
±2.5%RH,  
10% to 90%RH @ 77°F.
- Select °F or °C.
- Displays temperature, RH%, wet bulb and dew point.
- Auto-off can be disabled for data logging (DL3).



## AAV3: Air Velocity and Temperature

Measures air velocity. Use to estimate CFM. Also displays temperature.

- Use with the DL3 to find average air flow and compute CFM.

### Air velocity

- Ft/min, M/s, MPH, KM/hr.
- Range: 80 to 5900 ft./min.
- Accuracy: ±3% + 1dgt.

### Temperature

- Displays °F or °C.
- Range: -4°F to 140 °F.
- Accuracy: ±1°F from 32°F to 113°F.
- Resolution: 0.5°F.

